



USB-232-2

USB To RS-232 Converter – 9 Pin

SERIALCOMM.COM

Datasheet Revision 2.7

GENERAL FEATURES:

- Plug-and-Play (hot-pluggable)
- USB 1.1 and 2.0 compatible
- Port powered - no external power needed
- Supports 300 baud to 460,800 baud rates
- Supports all RS-232 signals: TX, RX, RTS, CTS, DTR, DSR, RI and GND
- 3 feet (1m) cable for convenience
- Transmit/Receive LED indicators
- Data direction auto-turnaround - no flow control necessary
- Internal 128/385 byte TX / RX buffers
- No IRQs, IO, DMA required. No IRQ conflicts
- Supports remote wakeup and power management
- Easy to install included drivers
- Built-in surge and static protection
- 5 Year manufacturer's warranty
- CE, FCC, RoHS and REACH certified



DESCRIPTION:

The SerialComm USB-232-2 is a bi-directional USB-powered USB to RS-232 converter which makes a full-duplex RS-232 port available to a PC via the USB port. The USB-232-2 has a DB9 male connector on the RS-232 serial port, and a USB type A female on the USB port. The adapter is powered from the USB port; no external power is required.

The USB-232-2 uses the latest FTDI chipset and is fully compatible with Windows 10 32/64, Windows 8 32/64, Windows 7 32/64, Vista 32/64, Server 2003, Server 2008, Server 2008 R2, XP 32/64, 2000 98Se, CE, Mac 8/9/x, Linux.

CERTIFICATIONS:




PINOUT CONFIGURATION:

RS-232 SIDE – DB9 MALE

SIGNAL	DCD	DTR	DSR	RTS	CTS	TX	RX	GND
PIN #	1	4	6	7	8	2	3	5

MALE DB9

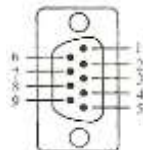

SPECIFICATIONS:

COMMUNICATION	
STANDARDS:	USB 2.0 and 1.1 Standards - EIA/TIA RS-232C Standard
OPERATING SYSTEM:	Windows 10 (32/64), Windows 8.1 (32/64), Windows 8 (32/64), Windows 7 (32/64), Vista (32/64), Server 2012, Server 2008 R2, Server 2008, Server 2003, XP (32/64), 2000, 98Se, CE, Mac 8/9/X, Linux and Android
BAUD RATES:	From 300 bps to 460,800 bps
CONNECTOR TYPES:	USB Side: Type A Female and RS-232 Side: DB9 Male
DISTANCE:	USB Side: 10ft (3m) and RS-232 Side: 16 ft (5m)
LED INDICATIONS:	RS-232 TX (Red) and RX (Green)
DRIVERS:	FTDI drivers are included in package
ELECTRICAL	
POWER SOURCE:	Port Powered From USB Port
CURRENT CONSUMPTION:	Less Than 100 mA
STATIC PROTECTION:	15KV Electric Static Discharge (ESD) Protection
SURGE PROTECTION:	600W Surge Protection
CONVERSION IC:	FTDI FT232RL
MECHANICAL	
WEIGHT:	2.0oz (58 grams)
DIMENSIONS:	RS-232 Housing: 2.33" X 1.42" X 0.58" (59.3 mm X 36.1 mm X 14.7 mm) Cable Length: 3 ft (1m)
ENVIRONMENTAL	
OPERATING TEMP.:	14° F to 140° F (-10°C to 60° C)
STORAGE TEM P:	-40° F to 185° F (-40°C to 85° C)
OPERATING HUMIDITY:	5% To 95% - No Condensation
QUALITY	
PRODUCT SAFETY:	CE, FCC, RoHS and REACH Third-part Certified
QUALITY MANAGEMENT:	Manufactured and Distributed to ISO 9001:2015 QMS
MEAN TIME BEFORE FAILURE:	427,056 Hours
RELIABILITY:	Low Failure Rate – 99+% Reliability Since Inception
WARRANTY:	5 Year Replacement Warranty

TROUBLESHOOTING INSTRUCTIONS:

Using one USB-232-2 unit:

1. Perform a loop back test on one unit:
 - a) Connect the TX to RX on the RS232 port.
 - b) Connect the USB connector on the cable to the USB port of the computer.
 - c) Install the USB / RS232 FTDI driver on the computer per instructions provided.
 - d) Running a hyper terminal program on the PC, send ASCII characters to the USB-232-2 converter from one PC port, and check that the characters are received at the same PC port. This tests that the transmit and receive functions of the USB-232-2 unit is working properly.
 - e) When there is constant RX data you should see the GREEN light blink. When there is constant TX data you should see the RED light blink.

Using two USB-232-2 units:

1. Perform a loop back test on two units:
 - a) Connect the two TX to RX and RX to TX on two USB-232-2 RS-232 ports. Or connect TX to TX and RX to RX with a null modem.
 - b) Connect the USB connectors on the cables to two USB ports on the computer.
 - c) Install the USB / RS232 FTDI driver on the computer per instructions provided.
 - d) Running hyper terminal programs on both PCs, send ASCII characters to the USB-232-2 converter from one PC port, and check that the characters are received at the 2nd PC port. Repeat the test in the opposite direction. This tests that the transmit and receive functions of both USB-232-2 units are working properly.
 - e) The GREEN light should flash when there is RX data and RED when there is TX data.