

## CON-485/422-EE9

**Industrial**  
**Externally Powered, Optically Isolated**  
**RS-232 To RS-485/RS-422 Converter**  
 Datasheet Revision 2.9

[SERIALCOMM.COM](http://SERIALCOMM.COM)

### GENERAL FEATURES:

- Plug-and-Play (hot-pluggable)
- Supports 2-wire RS-485 or 4-wire RS-422
- Optional selectable built-in 120-ohm terminal block for maximum flexibility
- Data direction auto-turnaround - no flow control necessary
- External 9V powered with included AC adapter
- Built-in surge and static protection
- 5-year replacement manufacturer's warranty
- CE, FCC, RoHS and REACH certified




### DESCRIPTION:

The SerialComm CON-485/422-EE9 is an industrial grade bi-directional externally powered 2.5K isolated RS-232 to RS-485/RS-422 converter which converts a full-duplex RS-232C port to a half-duplex two-wire RS-485 or full-duplex four-wire RS-422 port. A built-in data direction auto-turnaround feature automatically enables the RS-485/RS-422 driver when data is present from the RS-232 port, eliminating the need for software drivers, and making the device fully plug-and-play. The CON-485/422-EE9 is an effective solution for protecting RS-232, RS-485 and RS-422 devices from voltage surges, lightning strikes, ground loop conditions and signal noise problems. The unit is not reliant on port-power, so you do not have to worry about the RS-232's ability to power the converter. The CON-485/422-EE9 has a DB9 female connector on the RS-232 serial port, and either a DB9 male connector, RJ45 female connector or terminal block with built-in selectable 120-ohm termination option. Two terminal blocks are included one for the RS-485 and other for RS-422 application. The terminal blocks plug into the RS-485/RS-422 port, providing screw-lug wire termination for the port. The unit is enclosed in a heavy-duty steel housing for rugged applications.

### CERTIFICATIONS:



### CONNECTORS:

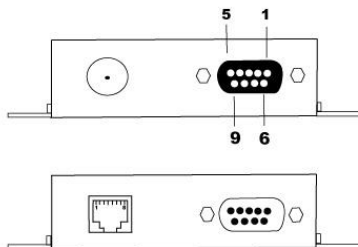

### PINOUT CONFIGURATION:

#### RS-232 SIDE – DB9 FEMALE

SIGNAL	DCD	DTR	DSR	RTS	CTS	TX	RX	GND
PIN #	1	4	6	7	8	2	3	5
FUNCT.	TIED			TIED		TX	RX	GND

#### RS-485/RS-422 RJ45

RS-485	D+	D-			GND
RS-422	T+	T-	R+	R-	GND
PIN #	1	2	3	6	7,8

#### RS-485 OPTION – DB9 MALE

RS-485	D-	D+			GND
PIN #	1	2	3	4	5


If you are using the terminal block for the RS-485 application, please use the 3-position terminal block with optional built-in 120-ohm termination.

#### RS-422 OPTION – DB9 MALE


RS-422	T-	T+	R+	R-	GND
PIN #	1	2	3	4	5

If you are using the terminal block for the RS-422 application, please use the 5-position terminal block with optional built-in 120-ohm termination.



#### FEM. DB9

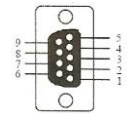



#### FEM. RJ45

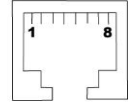

#### MALE DB9

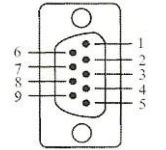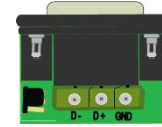


#### MALE DB9

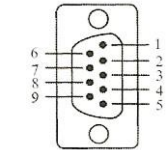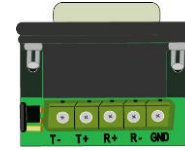


### TERMINATION GUIDE:


The CON-485/422-EE9 terminal blocks have optional built-in selectable 120-ohm termination. 120-ohm termination is an advanced feature typically used to reduce noise and signal reflections. It is recommended to use 120-ohm termination if you are exceeding 600 feet in distance, 19.6K baud or in a noisy environment. The terminal blocks are shipped with 120-ohm termination off but can be turned on using the convenient jumper setting located on the left bottom of the terminal blocks.

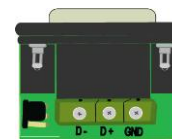


3 POSITION WITH 120-OHM OFF

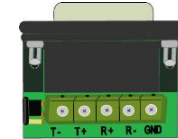

5 POSITION WITH 120-OHM OFF

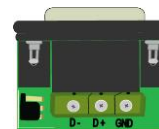

3 POSITION WITH 120-OHM ON

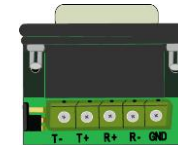

5 POSITION WITH 120-OHM ON

## SPECIFICATIONS:

COMMUNICATION	
<b>STANDARDS:</b>	EIA/TIA RS-232C, 2-wire RS-485 & 4-wire RS-422 Standards
<b>BAUD RATES:</b>	From 300 bps to 115,200 bps
<b>CONNECTOR TYPES:</b>	RS-232 Side: DB9 Female and RS-485/RS-422 Side: either DB9 Male, RJ45 or 3 or 5-way Terminal Block
<b>DISTANCE:</b>	RS-232 Side: 16 ft (5m) & RS-485/RS-422 Side: up to 4000 ft (1.2km)
<b>MAX # OF CONNECTIONS:</b>	128 Connection Drops
ELECTRICAL	
<b>DC/AC POWER ADAPTER:</b>	9 VDC/1A (Input: 100-240VAC 50/60hz US Type A Plug)
<b>OPTICAL ISOLATION:</b>	2500V (2500Vrms 1 min, AC)
<b>CURRENT CONSUMPTION:</b>	Less Than 100 mA
<b>STATIC PROTECTION:</b>	15KV Electric Static Discharge (ESD) Protection
<b>SURGE PROTECTION:</b>	600W Surge Protection
MECHANICAL	
<b>HOUSING:</b>	Heavy Duty Steel Case
<b>DIN RAIL:</b>	Optional DIN Rail Mounts
<b>WEIGHT:</b>	7.1oz (200 grams)
<b>DIMENSIONS:</b>	4.06" X 3.25" X 0.87" (103.0 mm X 82.6 mm X 22.0 mm)
ENVIRONMENTAL	
<b>OPERATING TEMP.:</b>	-40° F to 185° F (-40°C to 85° C)
<b>STORAGE TEMP.:</b>	-40° F to 185° F (-40°C to 85° C)
<b>OPERATING HUMIDITY:</b>	5% To 95% - No Condensation
QUALITY	
<b>PRODUCT SAFETY:</b>	CE, FCC, RoHS and REACH Third-party Certified
<b>QUALITY MANAGEMENT</b>	Manufactured and Distributed to ISO 9001:2015 QMS
<b>MEAN TIME BEFORE FAILURE:</b>	340,911 Hours
<b>RELIABILITY:</b>	Low Failure Rate – 99+% Reliability Since Inception
<b>WARRANTY:</b>	5 Year Replacement Warranty

## TROUBLESHOOTING INSTRUCTIONS:

Using one CON-485/422-EE9 unit:

1. Check that all connections comply with the connection diagrams.
2. Perform a loop back test on one unit:
  - a) Connect the TX+ to RX+ and TX- to RX- on the RS-485/RS-422 port.
  - b) Connect the RS-232 port to the PC RS-232 port.
  - c) Running a hyper terminal program on the PC, send ASCII characters to the CON-485/422-EE9 converter from one PC port, and check that the characters are received at the same PC port. This test the transmit and receive functions of the CON-485/422-EE9 unit is working properly.

Using two CON-485/422-EE9 units:

1. Check that all connections comply with the connection diagrams.
2. Perform a loop back test on two units:
  - a) Connect the two RS-485 or RS-422 ports.
  - b) Connect the two RS-232 ports to two PC RS-232 ports.
  - c) Running hyper terminal programs on both PCs, send ASCII characters to the CON-485/422-EE9 converter from one PC port, and check that the characters are received at the 2<sup>nd</sup> PC port. Repeat the test in the opposite direction. This test the transmit and receive functions of both CON-485/422-EE9 units are working properly.

## APPLICATIONS:

### RS-232 TO 2-WIRE RS-485 MODE OPTION:

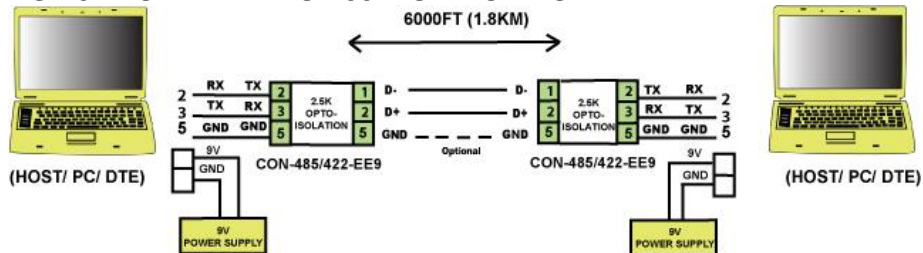


FIGURE 1: EXTENDING RS-232 DATA DISTANCE IN RS-485 MODE

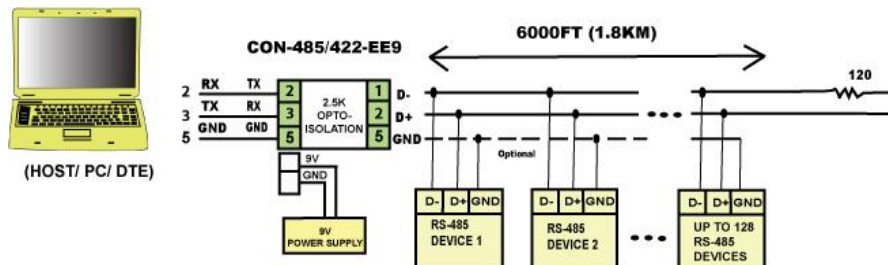


FIGURE 2: MASTER/SLAVE MULTIPLE DROP CONFIG. IN RS-485 MODE

### RS-232 TO 4-WIRE RS-422 MODE OPTION:

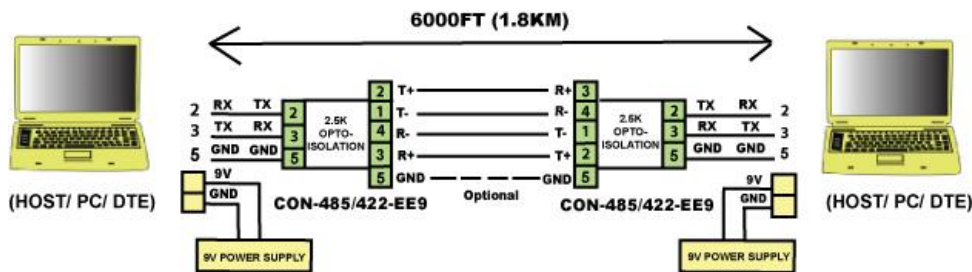


FIGURE 3: EXTENDING RS-232 DATA DISTANCE IN RS-422 MODE

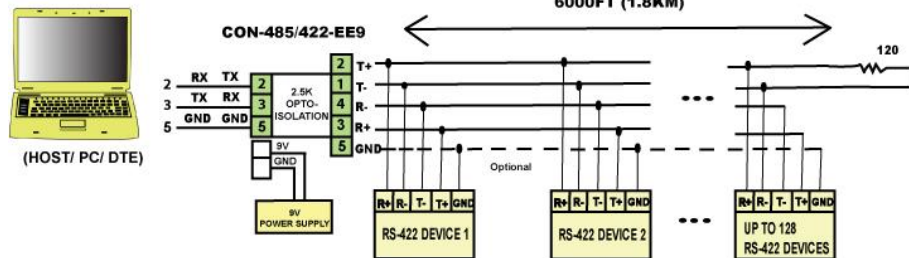


FIGURE 4: MASTER/SLAVE MULTIPLE DROP CONFIG. IN RS-422 MODE